

GUANTE GUANTES DE PVC JUBA - 240RI JUBA

PVC glove on cotton support, 40 cm long





NORMATIVE



ENISO374-5:2016

VIRUS





ESPECIALES

CHARACTERISTICS

- High quality PVC.
- Cotton interlock interior to absorb sweat and provide greater comfort.
- Completely watertight thanks to the one-layer PVC coating.
- Excellent abrasion resistance, great durability.
- Offers excellent grip on dry, wet and oily objects.
- Phthalate free.
- The Sanitized® hygiene function protects gloves from the formation of fungi, mites and bacteria, prevent odors, provides long-lasting material protection to polymers and minimize skin irritation.
- This glove protects against the following chemicals: Methanol (level 2,> 30 minutes), Sodium Hydroxide 40% (level 6,> 480 minutes), Sulfuric Acid 96% (level 3,> 60 minutes), Nitric Acid 65% (level 3,> 60 minutes), Hydrogen peroxide 30% (level 6,> 480 minutes), Hydrofluoric acid 40% (level 5, 360 minutes) and Formaldehyde 37% (level 6,> 480 minutes).

WORKING GLOVES SUITABLE FOR:

- Public services.
- Industrial cleaning.
- Refinery.
- Fishing industry (extraction).
- Transport of fuels.
- Jams.
- Plumbing.
- Asphalted.
- Steelmaking.



· For virus protection, the glove exceeds ISO 16604, test method B. (EN ISO 374-5: VIRUS)

MORE INFO

| Materials | Colour | Thickness | Length | Sizes | Packaging |
|-----------|----------|-----------|--------------------------------------|---------------------|----------------------------------|
| Pvc | Burgundy | 1.10 mm | M - 40 cm L - 40 cm XL - 40 cm | 8/M 9/L 10/XL | 12 pairs/package 72 pairs/box |


NORMATIVAS



EN388:2016 Protective gloves against mechanical risks.

The EN388: 2003 standard is renamed EN388: 2016, the year of its revision. The reason for the modification is given by the discrepancies in the results between laboratories in the knife cut test, COUP TEST. Materials with high levels of cut produce a dulling effect on the circular blades, which undermines the result.

The new regulation was published in November 2016 and the previous one is from the year 2003. During these 13 years, there has been a great innovation in the materials for the manufacture of cutting gloves, they have forced to introduce changes in the tests to be able to measure with more rigorous levels of protection. If you want to know more about the main changes in these regulations, you can consult it through our website www.jubappe.es

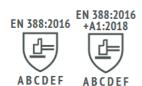

- A Abrasion resistance (X, 0, 1, 2, 3, 4) B Blade Cut Resistance (X, 0, 1, 2, 3, 4, 5) C Tear resistance (X, 0, 1, 2, 3, 4) D Puncture resistance (X, 0, 1, 2, 3, 4) E Cutting by sharp objects ISO 13997 (A, B, C, D, E, F) F Impact test complies / does not comply (It is optional. If it complies, put P)

| En388:2016 performance levels | 1 | 2 | | 3 | 4 | | 5 |
|------------------------------------|-----|---|----|------|----|-----|----|
| 6.1 abrasion resistance (cycles) | 100 | 5 | 00 | 2000 | 8 | 000 | - |
| 6.2 blade cut resistance (index) | 1,2 | 2 | ,5 | 5 | 1 | D | 20 |
| 6.4 tear resistance (newtons) | 10 | 2 | 5 | 50 | 7 | 5 | - |
| 6.5 puncture resistance (newtons) | 20 | 6 | 0 | 100 | 1 | 50 | - |
| Eniso13997:1999 performance levels | | А | в | с | D | Е | F |
| 6.3 tdm: cut resistance (newtons) | | 2 | 5 | 10 | 15 | 22 | 30 |

ENISO374-1:2016







The EN374: 2003 standard is renamed ENISO374: 2016. The purpose of this standard is to classify gloves according to their behavior when exposed to chemical substances.

They are divided into the following parts:

EN ISO 374-1:2016 - Terminology and performance requirements for chemical risks. EN 374-2:2014 - Determination of resistance to penetration.

EN 16523-1:2015 + A1:2018 - Permeation by liquid chemicals under continuous contact conditions. EN ISO 374-4:2019 - Determination of resistance to chemical degradation. EN ISO 374-5:2016 - Terminology and requirements demanded for risks of microorganisms.

Gloves classification according to ENISO374-1: 2016

Gloves are divided into three types:



UVWXYZ TYPE A

Step time ≥ 30 min for at least 6 products



TYPE B

Step time \ge 30 min for at least 3 products



XYZ



Step time \geq 10 min for at least 1 products

| Letter | Chemical substance | Cas number | Class | |
|--------|-----------------------|------------|-----------------------------------|--|
| A | Methanol | 67-56-1 | Primary alcohol | |
| В | Acetone | 67-64-1 | Cetone | |
| С | Acetonitrile | 75-05-8 | Nitrile compound | |
| D | Dichloromethane | 75-09-2 | Chlorine hydrocarbon | |
| E | Carbon disulfide | 75-15-0 | Sulphate organic compound | |
| F | Toluene | 108-88-3 | Aromatic hydrocarbon | |
| G | Diethylamine | 109-89-7 | Amine | |
| н | Tetrahydrofuran | 109-99-9 | Heterocyclic ether | |
| I | Ethyl acetate | 141-78-6 | Ester | |
| J | N-heptane | 142-85-5 | Saturated hydrocarbon | |
| к | Sodium hydroxide 40% | 1310-73-2 | Inorganic alkaline | |
| L | Sulphuric acid 96% | 7664-93-9 | Inorganic, oxidising mineral acid | |
| М | Nitric acid 65% | 7697-37-2 | Inorganic, oxidising mineral acid | |
| N | Acetic acid 99% | 64-19-7 | Organic acid | |
| 0 | Ammonia hydroxide 25% | 1332-21-6 | Organic alkaline | |
| Р | Hydrogen peroxide 30% | 7722-84-1 | Peroxide | |
| S | Hydrofluoric acid 40% | 7664-39-3 | Mineral organic acid | |
| т | Formaldehyde 37% | 50-00-0 | Aldehyde | |

Levels of resistance to permeability

| Taverage penetration time | Performance levels | Average penetration time | Performance levels |
|---------------------------|--------------------|--------------------------|--------------------|
| > 10 | Class 1 | > 120 | Class 4 |
| > 30 | Class 2 | > 240 | Class 5 |
| > 60 | Class 3 | > 480 | Class 6 |

Gloves classification according to EN374-2:2014

It is the advance of chemical products through the material, seams of the glove at a non-molecular level. Air leak test: the glove is inflated with air and immersed in water. The appearance of air bubbles is controlled within 30 '. Water leak test: the glove is filled with water and the appearance of water droplets is controlled. If these tests are positive, the pictogram will be put on.



Detriment to some of the glove's properties due to contact with a chemical. Eg: discoloration, hardening, softening, etc.Permeation test EN 16523-1. It is the advancement of chemicals at the molecular level. The resistance of the glove material to permeation by a chemical is determined by measuring the time it passes through the material.

Modification of the ENISO374-5: 2016 standard

When the glove passes the test described for virus protection, the word "virus" will appear under the pictogram. If nothing appeared, protection would only be assured against bacteria.